


STEPS


Hardware in Box



Parts with Labeling Codes

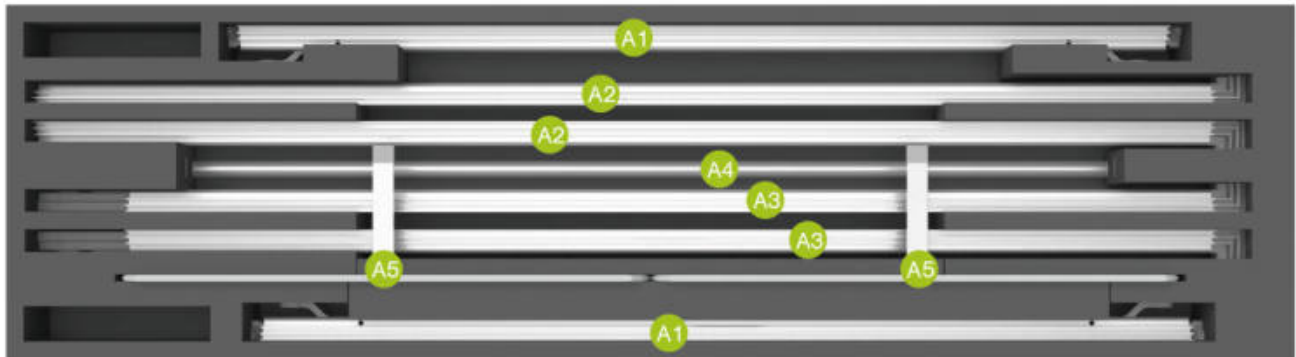


Parts with Labeling Codes on Frame

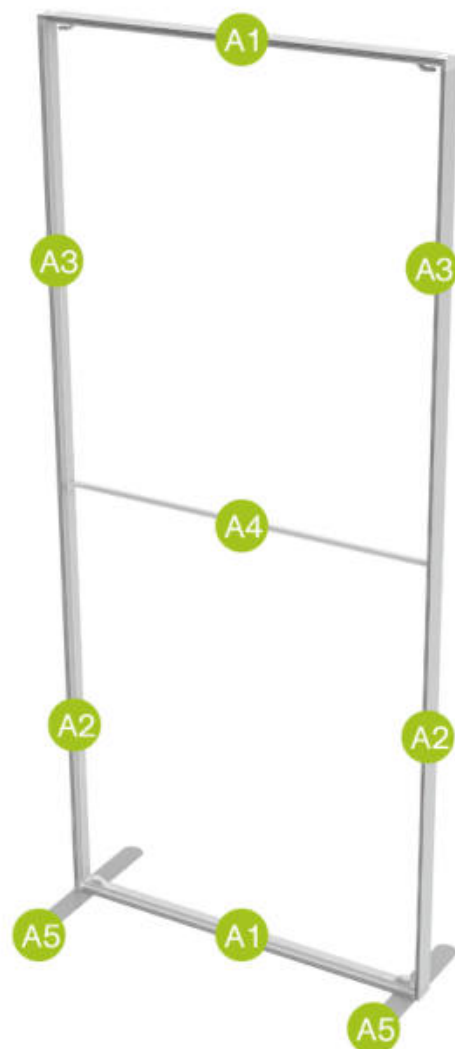

STEPS



STEP 01

Interconnect A2 & A3 vertical profiles.

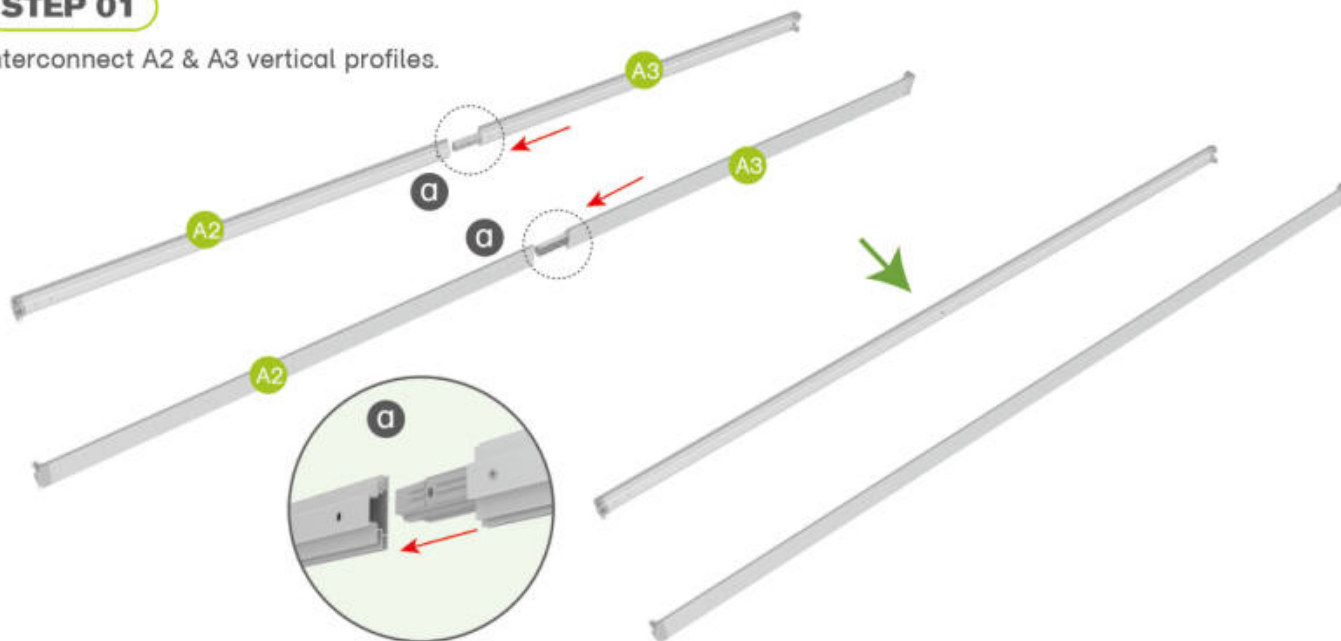

STEP 02


Interconnect horizontal & vertical profiles by pulling up buckle to insert into & pressing down to lock.

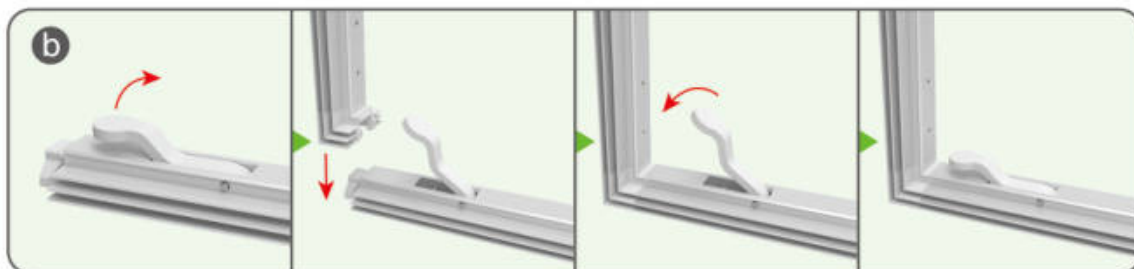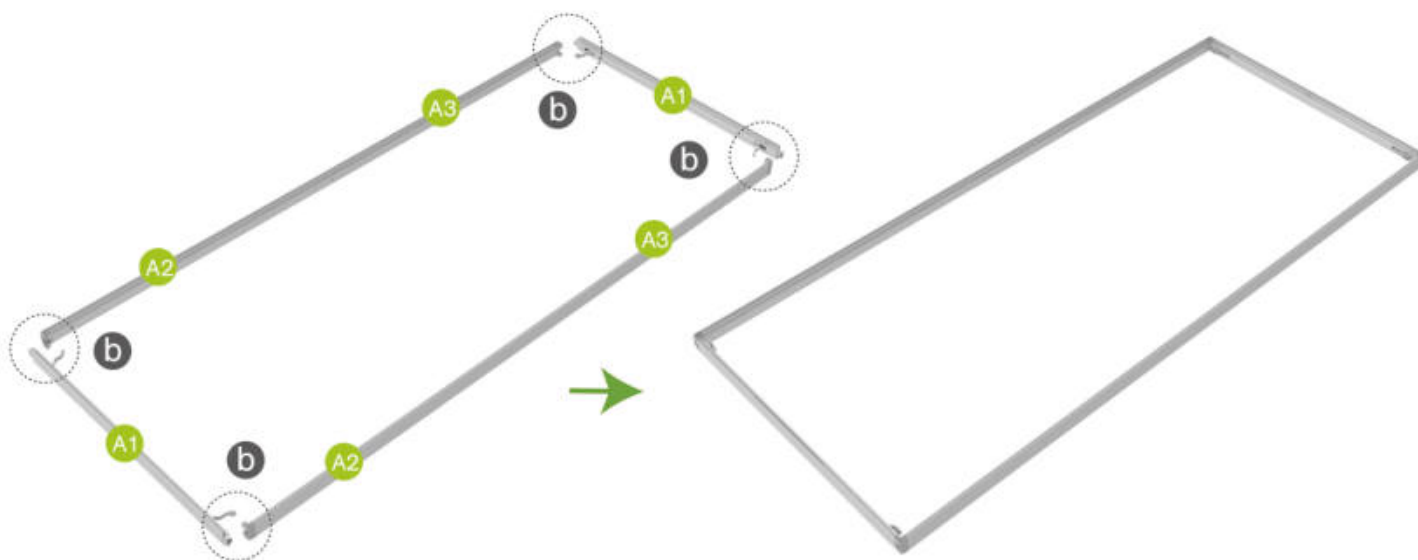

STEPS



STEP 03

Align side part's holes to install support rod.

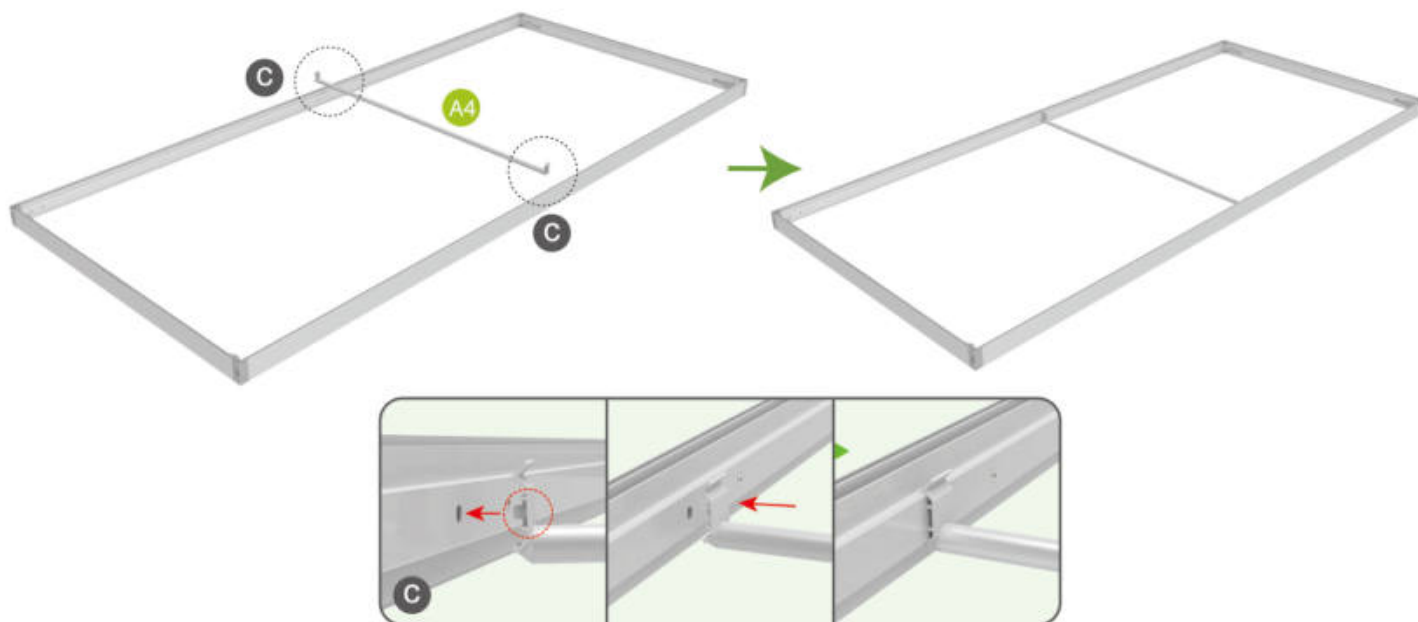


STEP 04

Insert frame onto feet.

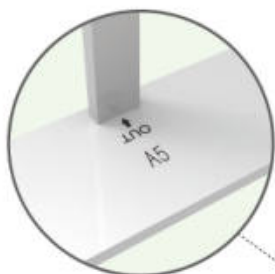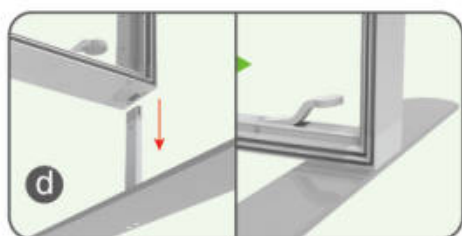

Align Feet's Outside with
Frame's Outside

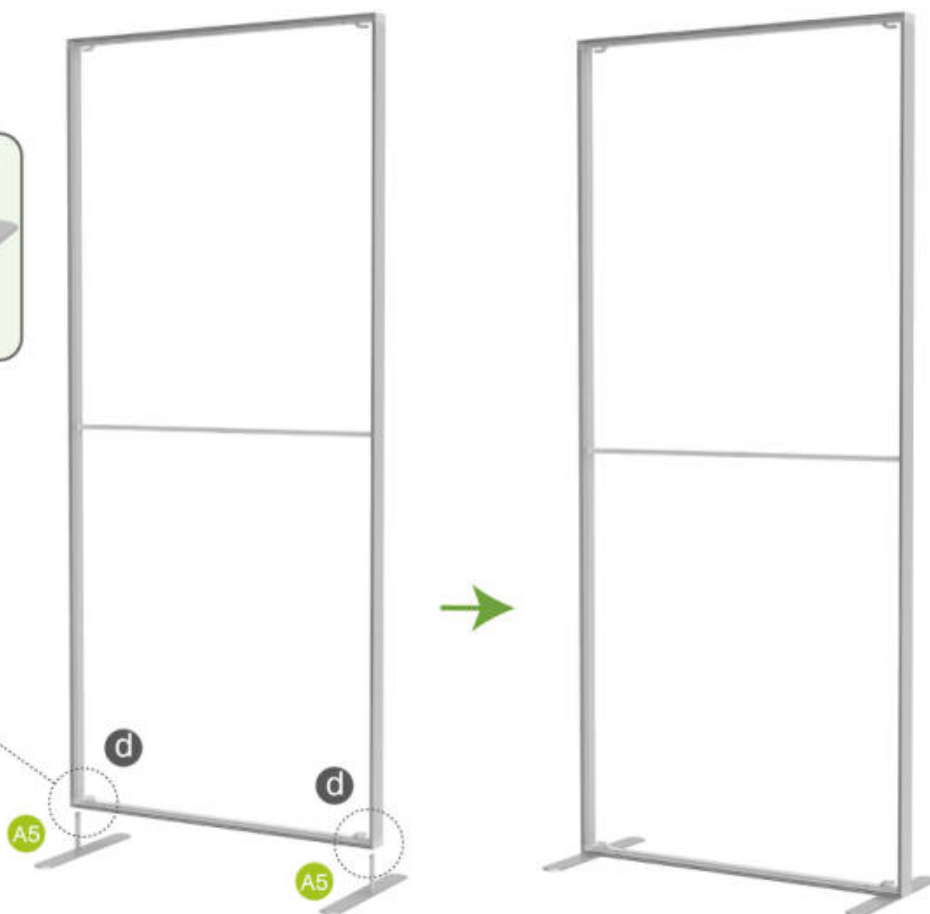

STEPS

STEP 05

Insert silicone edge graphic into channels from corners. (Same Steps for Double Sides)

